

# OV20i Setup Guide

## Table of Contents

1. Install Camera
2. Connect Screen
3. Create Recipe

## What do you want to know?

How do I connect the camera to my PLC?



How do I set up my first recipe?

How do I set up the segmenter?

How do I set up classification?

When should I use segmenter vs classifier?

What lens options are available?

Tips and tricks

# Install the OV20i

Time: **15-20 minutes**

You've opened the box. Let's get the camera physically set up and ready to go.



OV20i

---

## What's in the box

Your shipment includes:



OV20i Camera



Mounting  
Plate



M12 Power  
Cable



M12 Ethernet  
Cable



Power Adapter



Terminal Block

### OV20i camera

**WHAT IT'S FOR:** The camera unit itself

### Mounting plate + hardware

**WHAT IT'S FOR:** Secures the camera to your fixture

### M12 power cable

**WHAT IT'S FOR:** Connects camera to 24V DC power

### M12 Ethernet cable

**WHAT IT'S FOR:** Connects camera to your network/computer

### Power adapter (if included)

**WHAT IT'S FOR:** Provides 24V DC power

### Lens (may be pre-installed)

**WHAT IT'S FOR:** Captures the image

⚠ Two M12 cables

You'll find **two M12 cables** in the box: one for power, one for Ethernet. You need both connected for the camera to work. The power cable has a **17-pin M12 A-coded** connector. The Ethernet cable is standard M12 D-coded.


## Choosing the right lens

### ! info

Lens selection is typically handled by your Sales or Applications Engineer before deployment. The information below is provided for reference if needed.

The lens determines what the camera sees and how much detail it captures. This choice directly impacts everything downstream.

**The goal:** Fill the frame with your part as much as possible. If the part only occupies a small portion of the image, you're wasting pixels, and pixels are your resolution.

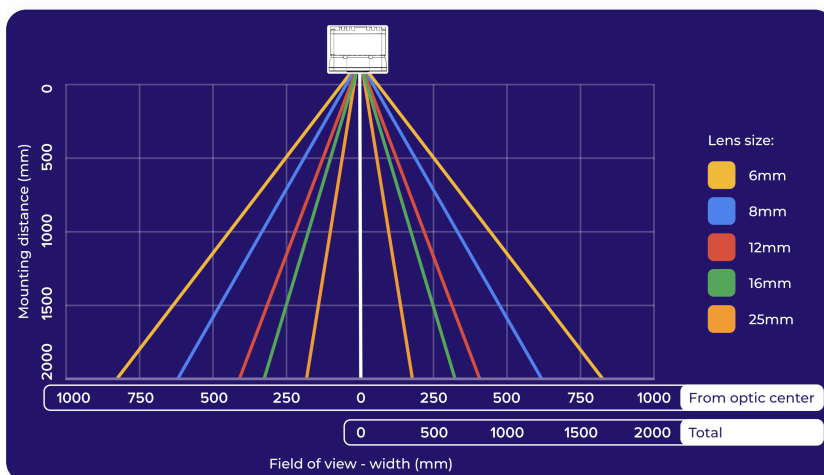

### **Short focal length (4-6mm)**

**BEST FOR:** Large parts, short working distance

**WATCH OUT FOR:** More distortion at edges (barrel/fisheye effect)

### **Medium focal length (8-12mm)**

**BEST FOR:** Most applications

**WATCH OUT FOR:** Good balance of field of view and distortion

### **Long focal length (16mm+)**

**BEST FOR:** Small parts, long working distance

**WATCH OUT FOR:** Narrower field of view

The OV20i comes with built-in S-mount lenses and software-controlled motorized focus. You can adjust focus from the browser UI without physically touching the camera.

#### **Think about distortion now**

If you use a wide-angle lens (short focal length), the image will have barrel distortion. Straight lines appear curved, especially at the edges. This directly impacts alignment accuracy later. You can correct it in software (lens distortion correction), but you need to know your lens causes distortion. We'll cover this in the image settings step.

#### **Calculate before you mount**

Use the [Optics Calculator](#) to determine your exact field of view, recommended mounting distance, and minimum detectable defect size before installing the camera. Getting optics right at this stage prevents costly rework later.

---

# Setting up your lighting

## ! info

Lighting requirements are typically determined by your Sales or Applications Engineer as part of the system design. The information below is provided for reference if needed.

Lighting is a physical problem that **cannot be solved in software**. The AI can only work with what the camera sees, and what the camera sees depends entirely on how the part is lit.

### Good lighting means:

- **Uniform:** no bright spots or dark shadows across the part
- **Repeatable:** the same lighting every time (avoid ambient light changes from windows, overhead lights cycling, day/night variation)
- **Reveals your defects:** if you're looking for scratches, angled lighting makes them visible. If you're looking for color differences, even diffuse lighting works best

The OV20i has built-in LED lighting with adjustable intensity and patterns. You can configure these in software later. The built-in LEDs work well for close-range inspections. For longer working distances or large parts, you may still need external lighting.

### Common lighting mistakes:

- Relying on factory overhead lights (they change throughout the day)
- Creating glare on shiny or reflective surfaces
- Under-lighting so the image is dark and noisy

---

## Step 1: Mount the camera


This is more important than it sounds. **The camera must be mounted stably and must not move.** Any vibration or shifting will undermine everything that follows: alignment, inspection accuracy, AI training, all of it.

- Use the mounting plate and brackets provided
- Tighten all fasteners fully
- If mounting on a machine frame, check for vibration. A camera that shakes even slightly will produce inconsistent results
- Consider the angle: mount the camera so it looks straight down (or straight at) the part

### **Stability is everything**

A camera that moves even 1-2 pixels between captures will cause alignment drift and AI accuracy issues that

are very hard to diagnose later. Spend the extra minute here to make sure the mount is rock-solid.

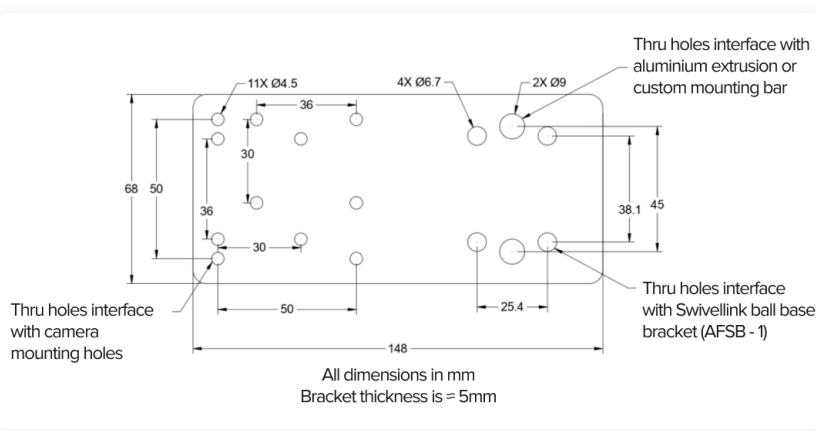


*OV20i mounting plate dimensions*

## Step 2: Connect the cables



*M12 17-pin power (OV20i)*

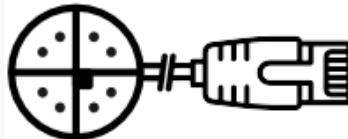

*M12 to RJ45 Ethernet*

- 1. Power cable:** Connect the M12 power cable between the camera and your 24V DC power source (19-24 VDC, minimum 1A, max 18W typical 15W)
- 2. Ethernet cable:** Connect the M12 Ethernet cable between the camera and your computer, switch, or network

Both cables must be connected. The camera needs power to run and Ethernet to communicate.

ⓘ **Power requirements**

- **Voltage:** 19-24 VDC regulated
- **Current:** Minimum 1A
- **Power:** Typical 15W, max 18W
- **Pins 13 or 14 = 24V DC (+), Pins 5 or 6 = GND**
- Do not use unregulated power supplies; voltage spikes can damage the camera

---

## Step 3: Power up and verify

Once both cables are connected:

1. Apply power
2. Watch the LEDs on top of the camera:
  - **Power LED** turns solid green: power is good
  - **System Status LED** blinks slowly during boot, then turns solid: system is ready
  - Boot takes approximately 30 seconds
3. If LEDs don't light up, check your power connections and voltage

**Power LED solid green**

**MEANING:** Power OK

**Power LED off**

**MEANING:** No power; check cables and supply

### System LED slow blink

**MEANING:** Booting up; wait 30 seconds

### System LED solid

**MEANING:** Camera ready

### System LED fast blink

**MEANING:** Error; check connections

All four LEDs are located on the top of the OV20i.

---

## Download 3D CAD models



### Desktop required for CAD downloads

3D CAD models (.STEP, .SLDPRT) are available for download when viewing on a desktop computer. These files require CAD software to open.

---

## Install checklist

Before moving on, confirm:

- Camera is mounted stably (give it a shake test; it shouldn't budge)
- Lens is appropriate for your working distance and part size
- Lighting is set up and consistent
- Power cable connected, Power LED is green
- Ethernet cable connected
- System LED is solid after boot

All green? Head to [Open the OV20i in Your Browser](#).

## What do you want to know?

🔍 How do I connect the camera to m



How do I set up my first recipe?

How do I set up the segmenter?

How do I set up classification?

When should I use segmenter vs classifier?

What lens options are available?

Tips and tricks

# Open the OV20i in Your Browser

Time: **5 minutes**

The camera is mounted and powered. Now let's see what it sees.

The OV20i is controlled entirely through a web browser; no special software to install. You just need a computer (or tablet) on the same network as the camera.

---

## Step 1: Get on the same network


Connect your computer to the same network as the camera. You can do this two ways:

**Option A: Direct connection** (simplest for setup)


Best when you're setting up the camera for the first time, working at a bench or test station, or don't have a network switch nearby. This gives you a private one-to-one link with no other network traffic.

- Plug an Ethernet cable directly from your computer to the camera
- Set your computer's IP address to something in the same subnet as the camera (e.g., 192.168.0.50 if the camera is at 192.168.0.100 )

**Windows:** Open Network Connections, right-click your Ethernet adapter, select Properties, then set the IPv4 address:

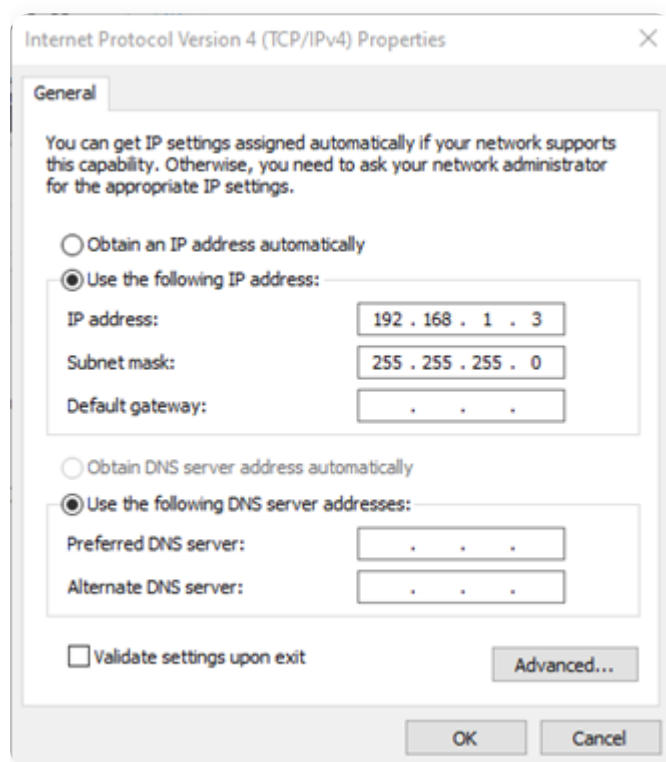

**Mac:** Open System Preferences > Network, select your Ethernet adapter, set Configure IPv4 to "Manually":

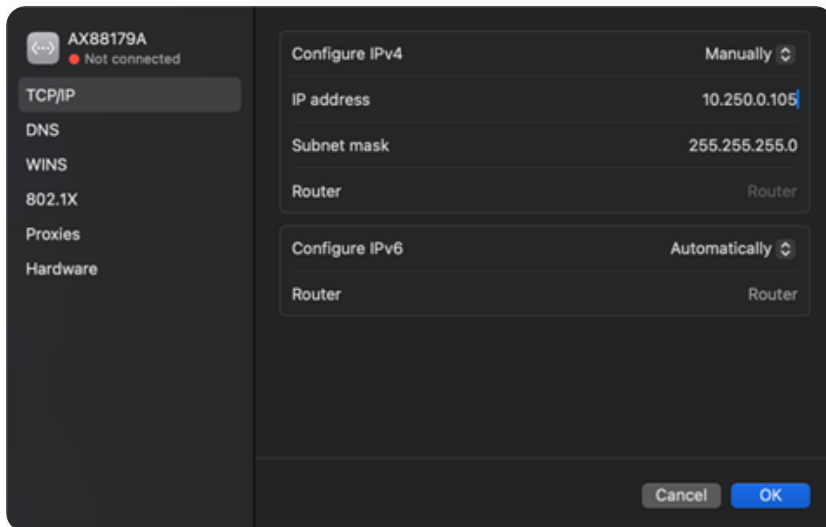

### Option B: Through a network switch

Best when the camera is already installed on the production line, when multiple people need to access the camera at the same time, or when you want the camera to stay connected to your facility network.

- Connect both the camera and your computer to the same switch
- Make sure they're on the same subnet (192.168.0.X)

#### ⓘ Default camera IP

The OV20i ships with a default static IP of **192.168.0.100**. If your network uses DHCP, the camera can also obtain an IP automatically, but for first-time setup, using the default static IP is easiest.

## Step 2: Find the camera's IP address

If you're using the default setup, the camera is at **192.168.0.100**.

If the IP has changed or you're using DHCP, you can find it by:

- Checking your network's DHCP lease table
- Using a network scanner tool
- Looking at the camera's LED pattern (refer to the LED Behavior Matrix in Reference)

---

## Step 3: Open the browser

Open **Google Chrome** (recommended) or any modern browser and navigate to:

```
http://192.168.0.100
```

If this is a new camera, you will see the **Product Activation** page.

**Supported browsers:** Chrome (recommended), Firefox, Edge. Safari may have limited compatibility.

---

## Step 4: Activate the device

On first connection, the camera shows the Product Activation page. Complete the following to activate your device:

1. Enter your **Company** name

2. Enter your **Company Email** address
3. Expand and review the **End User License Agreement**
4. Check the box to accept the End User License Agreement
5. Click **Activate Device**



**tip**

Activation requires an internet connection on the camera. If your camera does not have internet access, contact [support@overview.ai](mailto:support@overview.ai) for assistance.

Once activated, you will see the camera's **All Recipes** page with a navigation sidebar on the left.



**No internet required after activation**


The camera runs entirely on your local network. You don't need internet access to use the camera, configure recipes, or run inspections. Internet is only needed for activation, firmware updates, and cloud features.

---

## Step 5: Activate a recipe

To start working with the camera, you need an active recipe. If you already have one, click **Activate** on it. If this is a fresh camera, click **+ New** to create your first recipe.

Once a recipe is active, click **Edit** to open the **Recipe Editor**. This is where you'll configure image settings, alignment, inspection regions, and AI training.



**Next step:** Head to [Step 1: Image Settings](#) to configure your camera's live image and verify everything looks right.

---

## Troubleshooting connection issues

▶ [Common connection problems and fixes](#)

 **Emergency USB connection**

If you can't reach the camera over Ethernet, you can connect via USB. The emergency USB IP is **192.168.55.1**.

For more detailed network troubleshooting, see [Troubleshooting & FAQ](#).

---

## Connection checklist

- Browser connects to camera IP (192.168.0.100)
- All Recipes page loads
- Recipe activated and Recipe Editor open

**You're connected! Next up: [Step 1: Image Settings](#) to dial in your camera's image.**

## What do you want to know?

🔍 How do I connect the camera to my PLC?



How do I set up my first recipe?

How do I set up the segmenter?

How do I set up classification?

When should I use segmenter vs classifier?

What lens options are available?

Tips and tricks

# Create Your First Recipe (OV20i)

Time: **30-45 minutes**


This is where your camera becomes an AI inspector. A **recipe** is a complete package (image settings, alignment, inspection regions, AI model, and output rules) bundled together for one specific inspection task.

You can have as many recipes as you want on a camera. Each one can be saved, backed up, transferred to other cameras, and version controlled.

---

## Before you start: remember the waterfall

Everything in this section follows [the Waterfall Principle](#). You'll go through six steps in order. **Don't skip ahead.** Verify each step works before moving to the next.

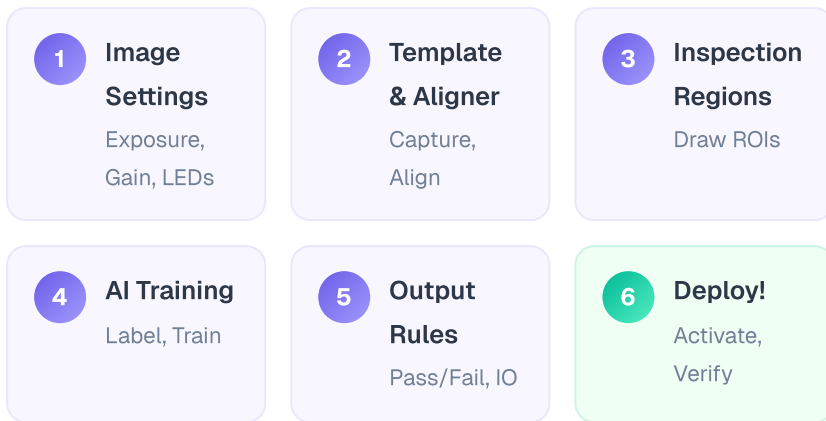

 **Start with Development Mode enabled**


Development Mode lets you test your recipe without affecting production output. It trains a quick model in about 30 seconds so you can verify accuracy at each step. Switch to Production Mode only after you have confirmed the inspection works reliably.

## Create a new recipe

1. Go to **All Recipes** in the left sidebar (this is also the landing page when you open the camera)
2. Click **+ New**
3. Give it a name (e.g., "Screw Presence Check")
4. Choose the recipe type:
  - **Classification:** for pass/fail, presence/absence, or multi-category decisions
  - **Segmentation:** for pixel-level defect detection (scratches, stains, measurements)
5. Click **Activate** to enter the recipe editor

Activate and go to editor

Here is what the **Recipe Editor** looks like. The three main sections (Imaging Setup, AI Blocks, IO Block) map directly to the waterfall steps:

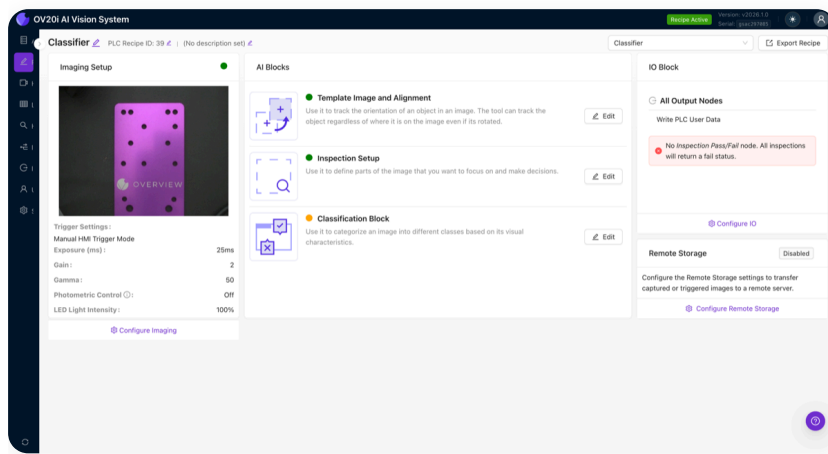

### ⚠ Recipe type

Choose either a **classifier** OR a **segmenter** per recipe (not both). The OV10i supports classifiers only. Segmentation requires an OV20i.

Not sure which to choose? See [Classifier vs. Segmenter](#) or ask the AI Assistant at [tools.overview.ai](https://tools.overview.ai).


### ℹ One model type per recipe on the OV20i

The OV20i supports both classifiers and segmenters, but each recipe uses one type per inspection. Choose based on your inspection needs. If you need both pixel-level detection and classification in the same capture, consider the OV80i which supports multi-model recipes.

Now follow the six steps:

# Step 1: Image Settings

[Full guide: Image Settings](#)

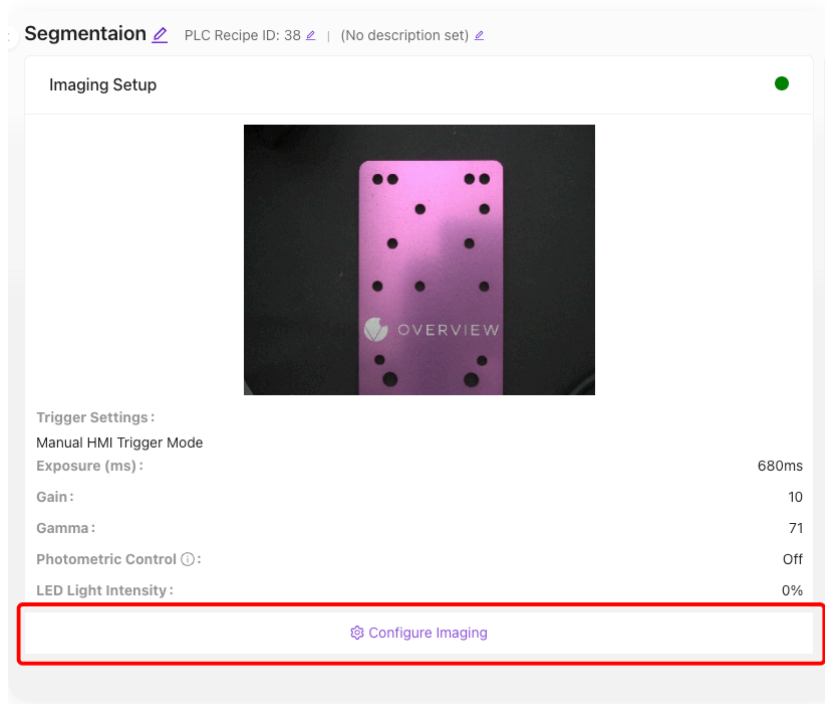

Get your camera image looking clean and consistent. Adjust exposure, gain, white balance, and, critically, **enable lens distortion correction** if you're using a wide-angle lens.

## Key settings:


- **Exposure:** How long the sensor captures light. Higher = brighter but more motion blur
- **Gain:** Digital brightness boost. Higher = brighter but noisier
- **Lens Correction:** Fixes barrel distortion from wide-angle lenses. **Enable this now if applicable.** Don't skip it
- **LED settings (OV20i):** Adjust intensity and pattern to reduce glare

**Verify before moving on:** Click Live Preview. The image should be sharp, well-lit, and consistent shot to shot.

---

## Step 2: Template Image & Alignment

[Full guide: Alignment Explained](#)



This is the step most customers find challenging, and the one that makes the biggest difference. The aligner is what makes your inspection regions automatically track your part as it moves around in the image.

### **The short version:**

1. Capture a template image of a good part
2. Place 2-3 small template regions on features that never change (strong edges, corners, holes)
3. Place them as far apart as possible on the part
4. Clean up noisy edges with the Ignore tool
5. Save, then test with Live Preview. Move the part around and verify the alignment tracks it

**Read [Alignment Explained](#) for the full walkthrough.**

This is the most important page in this documentation.

---

## Step 3: Inspection Regions (ROIs)

### [Full guide: Inspection Regions](#)

Now draw the areas where the AI will actually inspect. These are your Regions of Interest (ROIs).

**The critical rule: Keep ROIs as small as possible.** This is the second biggest source of customer issues. Read [Why ROI Size Matters](#) to understand why.

### **The short version:**

1. Create an Inspection Type (e.g., "Screws") with your expected classes (e.g., "present", "absent")
2. Draw rectangular ROIs on each location you want to inspect
3. Make them just big enough to contain the feature, no bigger
4. Name them descriptively (e.g., "Screw\_Top\_Left")

---

## Step 4: Train Your AI Model

### [Full guide: Training Your AI](#)



Label a few images and train your first model.

**The short version:**

1. Start with **3-5 images per class**. Don't over-collect
2. **Double-check every label** before training (one mislabel can ruin your model)
3. Train in **Development Mode** first (~30 seconds) to check the signal
4. Test with Live Preview. Try to break it
5. Add targeted data where it fails, retrain
6. When development mode works well, switch to **Production Mode** (5-10 minutes)

---

## Step 5: Output Rules (IO Block)

**Full guide: [Setting Up Outputs](#)**




Define what happens when the AI makes its decision.

**Basic Mode:** Set rules for pass/fail. The simplest setup: all ROIs must pass for a global pass. That single binary result gets sent to your PLC, HMI, or output.

**Advanced Mode (Node-RED):** For anything beyond simple pass/fail: custom dashboards, time-series logic, data routing to MES systems, barcode integration, and more. Use [tools.overview.ai](#) to generate Node-RED flows from plain English descriptions.

---

## Step 6: Deploy and verify

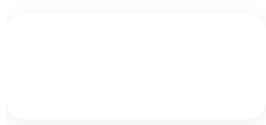

1. Activate your recipe
2. Set your trigger mode (manual, hardware sensor, PLC, or interval)
3. Run test parts through the system
4. Verify the pass/fail output matches your expectations
5. Check edge cases, the parts that are hardest to classify

**Congratulations! You now have a running AI inspection.**

---

## Recipe checklist

Before moving on, confirm:

- New recipe created and named
  - Image settings configured: sharp, well-lit, consistent
  - Alignment set up and tracking reliably
  - Inspection regions drawn: small, well-positioned, named
  - AI model trained and tested in development mode
  - Output rules configured: pass/fail matches expectations
  - Recipe activated and deployed with correct trigger mode
- 

## What's next?

- **Improving Your Model:** How to keep your AI getting better over time
- **Troubleshooting & FAQ:** Common issues and quick fixes
- **Classifier vs. Segmenter:** Detailed guide on when to use which